


# Auto Transducer Switching Box

The Auto Transducer Switching Box from Crane enables up to 5 Torque Transducers to be connected to either our TorqueStar Opta or IQVu Torque Data Collectors simultaneously. The Auto Switching Box enables the user to select each Transducer individually through the Torque Data Collector’s menu system.

The connectors are numbered 1 to 5, each with its own LED light which identifies to the operator which Torque Transducer is currently active. A further LED light on the box illuminates if no Torque Transducers are connected.

The Auto Switching Box eliminates the need to manually connect and disconnect Torque Transducers to your Torque Data Collector when required and the TorqueStar and IQVu will also suggest the most suitable Torque Transducer from the available information.

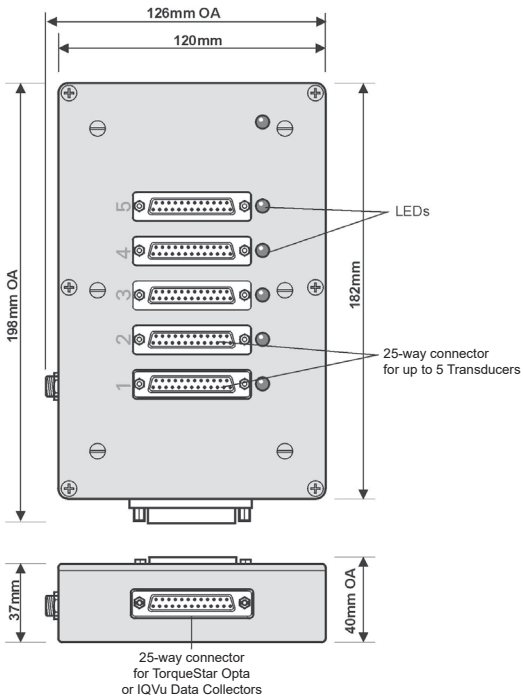

**Crane Electronics Ltd**  
Watling Drive  
Sketchley Meadows  
Hinckley LE10 3EY  
Tel: +44(0) 1455 25 14 88  
www.crane-electronics.com

**Crane Electronics Inc**  
1260 11th Street West  
Milan, Illinois 61264  
USA  
Tel: +1 309-787-1263  
www.crane-electronics.com

